AX-HMP1 Hydraulic Press USER MANUAL

Description

AX-HMP1 Hydraulic Press is very simple and efficient, accurate pressure can be achieved with the help of the vacuum meter.

Specification

Pressure: 0-25MPa Working Pressure: 0-12MPa Usage: 1-2 flask Dimensions: 30 x 22 x 45 (cm)

Parts

- 1. Rotary Handle
- 2. Upper Post
- 3. Upper Plate
- 4. Lower Plate
- 5. Vacuum Meter
- 6. Lever Handle
- 7. Pressure Lock
- 8. Casing

Operation

- 1. After unpacking, install the rotary handle and the lever handle.
- 2. Rotate the pressure lock anti-clockwise, press the lower plate to the bottom by hand, and rotate the pressure lock clockwise to lock the pressure.
- 3. Rotate the rotary handle anti-clockwise to make space for the flask.
- 4. Put the flask between the plates, rotate the rotary handle clockwise to fix the flask.
- 5. Move the lever handle up and down and observe the pressure gauge until the pressure reaches 12MPa.

(NOTE: The pressure SHOULD NOT exceeds 15MPa)

6. After pressing the flask, loosen the pressure lock and rotary handle and remove the flask.